

Classic to MNGP Filter Cable Installation
Rev. B 2-5-2015



Figure 1. The cable

Turn off the PV input and battery power to the Classic. Remove the Cover and unplug the existing MNGP (remote) phone cable from the Classic's TOP RJ-11 jack. Replace the cable with the new cable supplied, taking care to place the ferrite sleeve on this new cable inside the wiring compartment as shown in Figure 2.

To help the cable and cover to fit well, you can pull most of this cable into the wiring compartment if there is room. The reason for placing the ferrite portion of the cable into the wiring compartment is so that it does not get compressed between the top cover and control circuit board and break any electronic components. Be sure that the cable does not rest against the fan hub so it can spin freely.

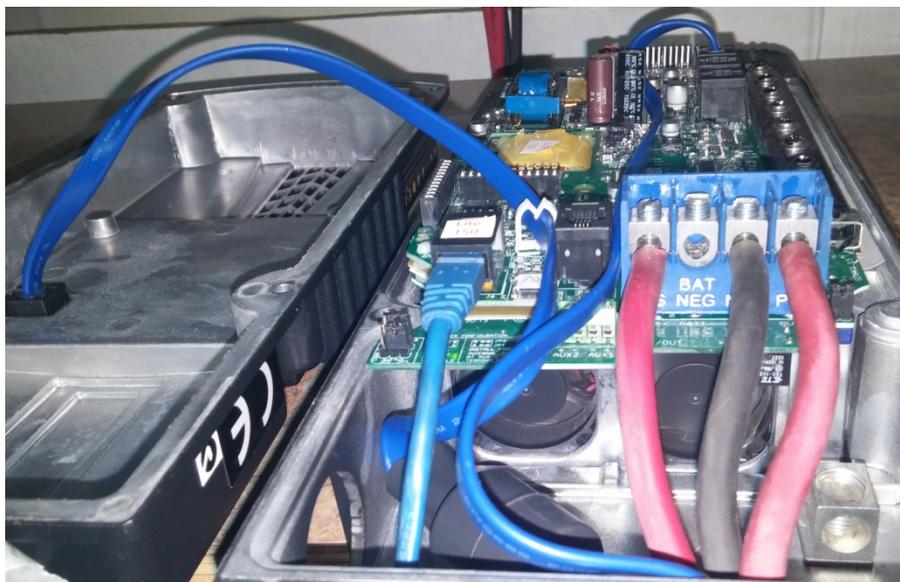


Figure 2. Suggested Cable Placement/Dressing